CAUTION: Save all packaging should you have to transport the T1200 in the future or you will void any MobileDemand warranties.

Contents – xTablet T1200 Kit

After opening the kit, carefully inspect its contents for any missing or damaged items. Contact your dealer if any found or for more information about other items that may be included. The kit should contain the following:

One **xTablet® T1200** with hard disk drive	One AC/DC power supply with power	Two high-capacity Lithium Ion batteries
Auto adapter with power cord (*o*ptional)	*xTablet T1200 User's Guide* and *Driver CD* (installed in main disk)	Hand straps for the back and for the side.

Note: See the *xTablet T1200 User's Guide* (installed in the main disk) for information about features included with the **xTablet T1200**.

Before You Begin

- *(Optional)* You can grasp a corner of the film and gently pull the top thin layer off the display.

Corner of film to pull off the display (circled in illustration).

- *(Optional)* You can use the stylus (touch pen) like a mouse, a pen, or your finger on the **xTablet T1200** display to perform regular left-click and right-click functions and to write in applications where applicable. When you are not using the stylus, you should store the stylus in the stylus holder that is on the right side of the **xTablet T1200**.

To perform a right-click function
Point and hold the stylus steadily on the display for about 3 to 5 seconds, wait for the cursor to change to a circle, then lift the stylus away from the display and the appropriate right click menu will show up. *Note that you can also perform this function using your finger.*

Stylus pen with cord wrapped around upper end.

Calibrating the Touch Screen

The touch screen is a thin membrane on the top of the display that responds to mechanical pressure on the screen's surface. The cursor on the screen is controlled by the stylus or your fingertip. If you notice the tip touch-point is not matching up with the cursor, you can calibrate the touch screen.

Note: See "Calibrate the Screen" in the *xTablet T1200 User's Guide* for more information.

To calibrate your touch screen

1. Select **Start** > **Control Panel** > **Tablet PC Settings**, then tap **Calibrate** to activate the calibration.
2. Hold the pen and position your stylus as you normally do when working with the **xTablet T1200**.
3. Use the pen tip to click on the center of the crosshairs. The wheel moves to another location onscreen. *Repeat this step until you have gone through all of the crosshairs.*
4. Tap **Yes** to accept the calibration.
5. Tap **OK** to close the **Tablet PC Settings**.

Adjusting the Brightness

Use the following hot key combinations to adjust the brightness of the display:

Press Fn + - darkens the display

Press Fn + - lightens the display

Note: See "Function Keys" in the *xTablet T1200 User's Guide* for more information.

Monitoring the Battery Power

Note: See "Monitoring the Battery Power" in the *xTablet T1200 User's Guide* for detailed information.

You can check the remaining battery power in the **Power** icon located at the lower right-hand corner of the task tray. The **Power** icon only appears in the taskbar while the unit is running on the battery power but not while the unit is running off an external power source through the AC adapter.

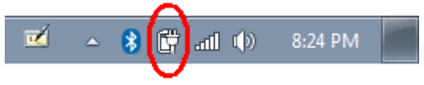

To view the available battery power

- Tap the **Power** icon on the taskbar to view the available power for each battery.

Note: If you do not see the **Power** icon in the taskbar, select **Start** > **Control Panel** > **Notification Area Icons**, select the **Show icon and notifications behavior** from the **Power** drop-down list, then tap **OK**.

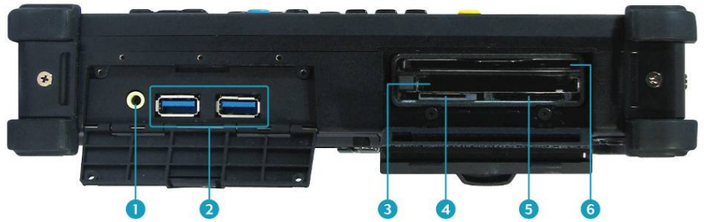

1. Earphone Jack – Connect to external speakers or headphones
2. USB 3.0 Ports – Connect to USB peripheral devices
3. PC Card Slot – Use to insert Type II PC Card
4. SIM Card Slot – Not Applicable
5. SDHC Card Reader – Use to insert SD memory card
6. Smart Card Reader – Use to insert smart cards

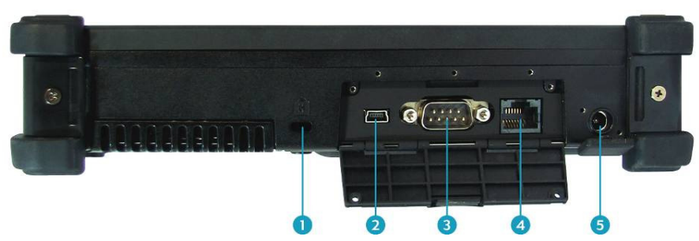

1. Earphone Jack – Connect to external speakers or headphones
2. USB 3.0 Ports – Connect to USB peripheral devices
3. PC Card Slot – Use to insert Type II PC Card
4. SIM Card Slot – Not Applicable

3 (Over)

Charging the Battery Packs

When you use the AC adapter to connect your **xTablet T1200** to a power outlet, the internal battery packs will automatically begin to recharge. While the battery pack is charging, the **Battery Charge** icons on the LED indicator panel will be active after 6 to12 seconds:

- **Blinking Red** – battery power is at slow-power (critical) state - time to recharge
- **Steady Orange** – battery pack is charging
- **Steady Green** – battery pack is fully charged

*Upper left corner of front view of the **xTablet T1200** with the LED Indicators – the **Battery Status** icons are #2 and #3.*

1. Power indicator
2. 1st Battery status indicator
3. 2nd Battery status indicator
4. Built-in hard disk indicator
5. WLAN or Bluetooth indicator

Note: The **xTablet T1200** can run on both fully-charged Lithium Ion batteries for 8 to 10 hours with the Hi-Brite LCD panel, or 10 to 12 hours with standard LCD panel.

If your **xTablet T1200** is turned off, the fully-discharged batteries will take about three hours per pack to recharge. Refer to the following:

Replacing the Battery Pack

Over time, battery pack capacity gradually decreases. MobileDemand recommends that you replace your battery packs when you notice that they begin to store significantly less charge.

To replace the battery pack

1. Turn off the **xTablet T1200**.
2. Press and hold the battery latch release button, and slide the latch to the **UNLOCK** position to release the depleted battery pack

3. Lift the depleted battery pack out of the compartment and remove it from tray.

4. Align the replacement battery into the battery compartment.

5. Push completely until battery locks into place, and slide the latch to the LOCK position to secure the battery.

T1200
Rugged Tablet PC

Quick Start Guide

MobileDemand

Innovation everywhere. Productivity anywhere.

Questions? Call MobileDemand Support at 877-784-4338.

Copyright © 2010 MobileDemand, LC.
All Rights Reserved.